

Northern Brewer Kettle Bulkhead

1 Drill a 7/8" hole in your kettle. Remove the locknut, both silicone o-rings and the steel washer from the threaded nipple on the bulkhead.

2 Put the steel washer on the threaded nipple, then put one silicone o-ring on the nipple and push the o-ring and the washer all the way back.


3 Place the bulkhead assembly inside the kettle and push the threaded nipple through the hole. The o-ring should be resting against the inside wall of the kettle.

4 On the outside of the kettle, place the second o-ring on the nipple and push it against the outside wall of the kettle.

5 Thread the locknut onto the nipple and tighten it until it just touches the large o-ring.

6 Tighten from the inside only - hand-tighten, then use pliers. Initial tightening of the locknut from the outside can damage the o-ring.

7 Once snug, the locknut can be tightened the rest of the way from the outside.

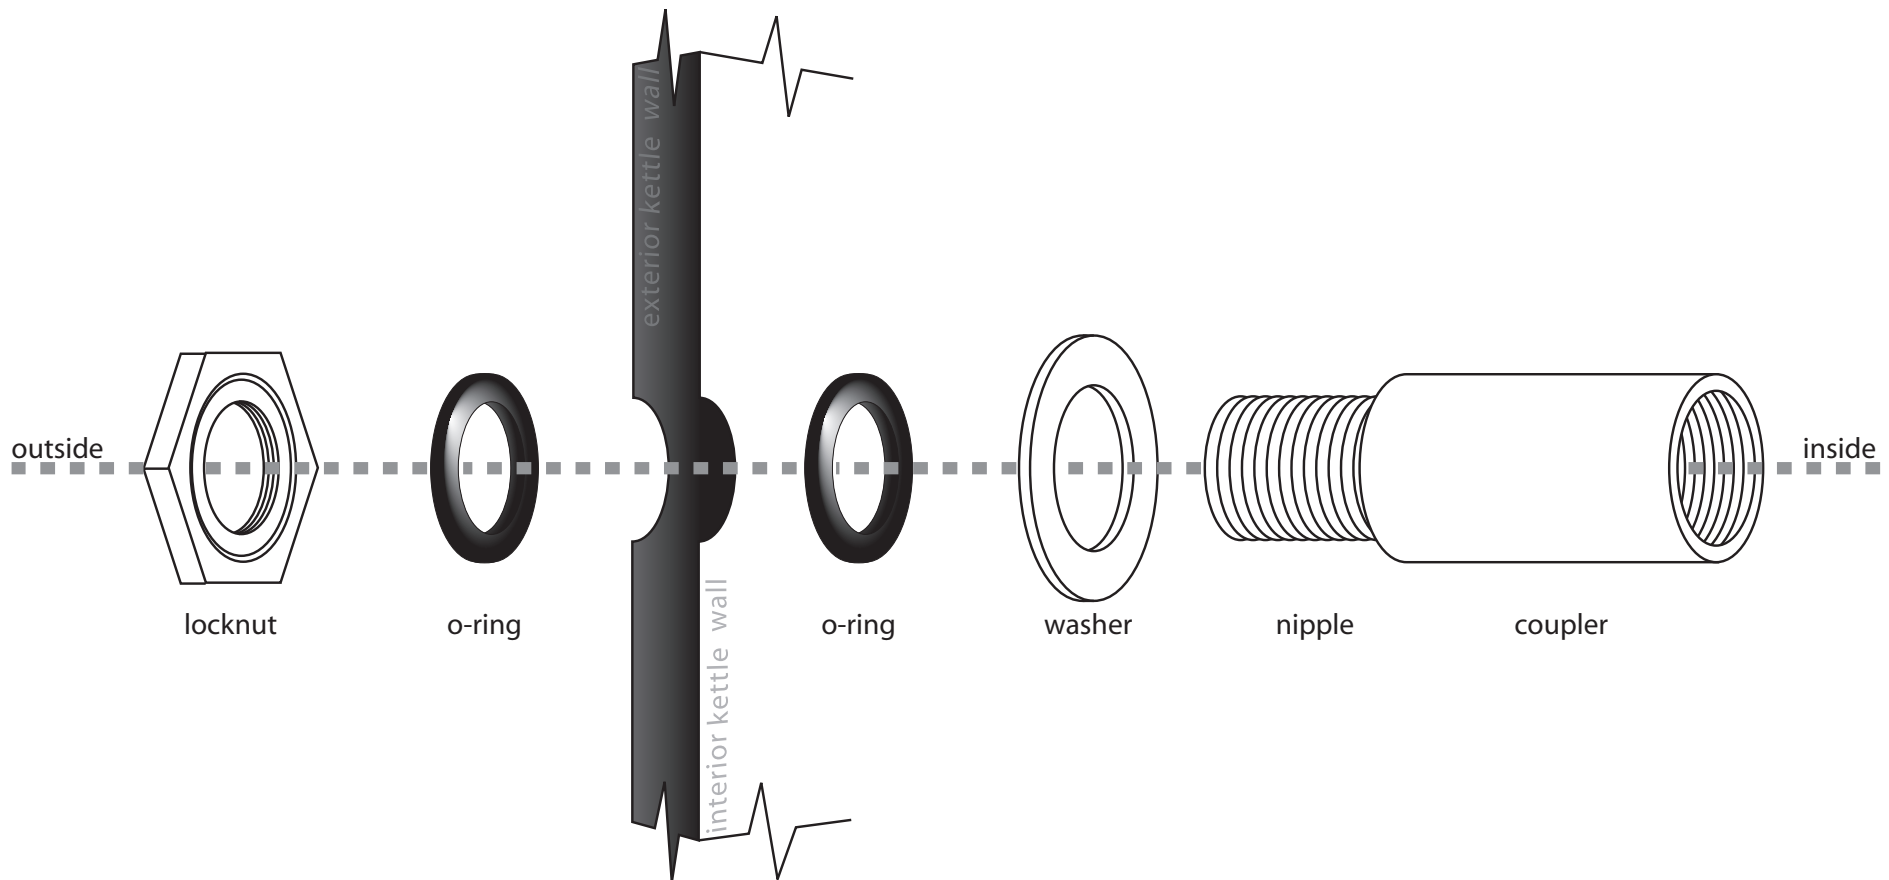

KETTLE BULKHEAD